



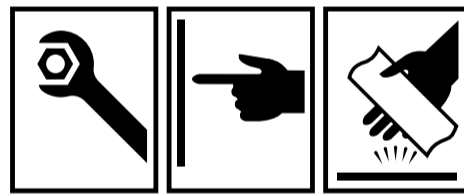

Ordering spares / Ersatzteil - Regelung / Pièces de rechange / Parti di ricambio / Lista de recambios / Onderdelen bestellen (NL/B) / Κωδικοί Ανταλλακτικών / Bestilling af reservedele / Beställning av reservdelar / Bestilling av reservedeler / Резервни части / Запчасти / Części zapasowe / Piese de schimb / Rendelhető alkatrészek / Запасні частини / Резервни делови / Резервни делови / Atsarginių dalių / Tellitavad varuosad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek parça siparişi / Nadomestni deli

XX = AA, AD, .....



- 1 - A 861244 NU
- 1a - A 861243 NU
- 2 - A 861509 NU
- 3 - B 961764 XX
- 4 - A 861431 XX
- 5 - A 962708 NU
- 6 - B 961752 XX
- 6a - B 961754 XX

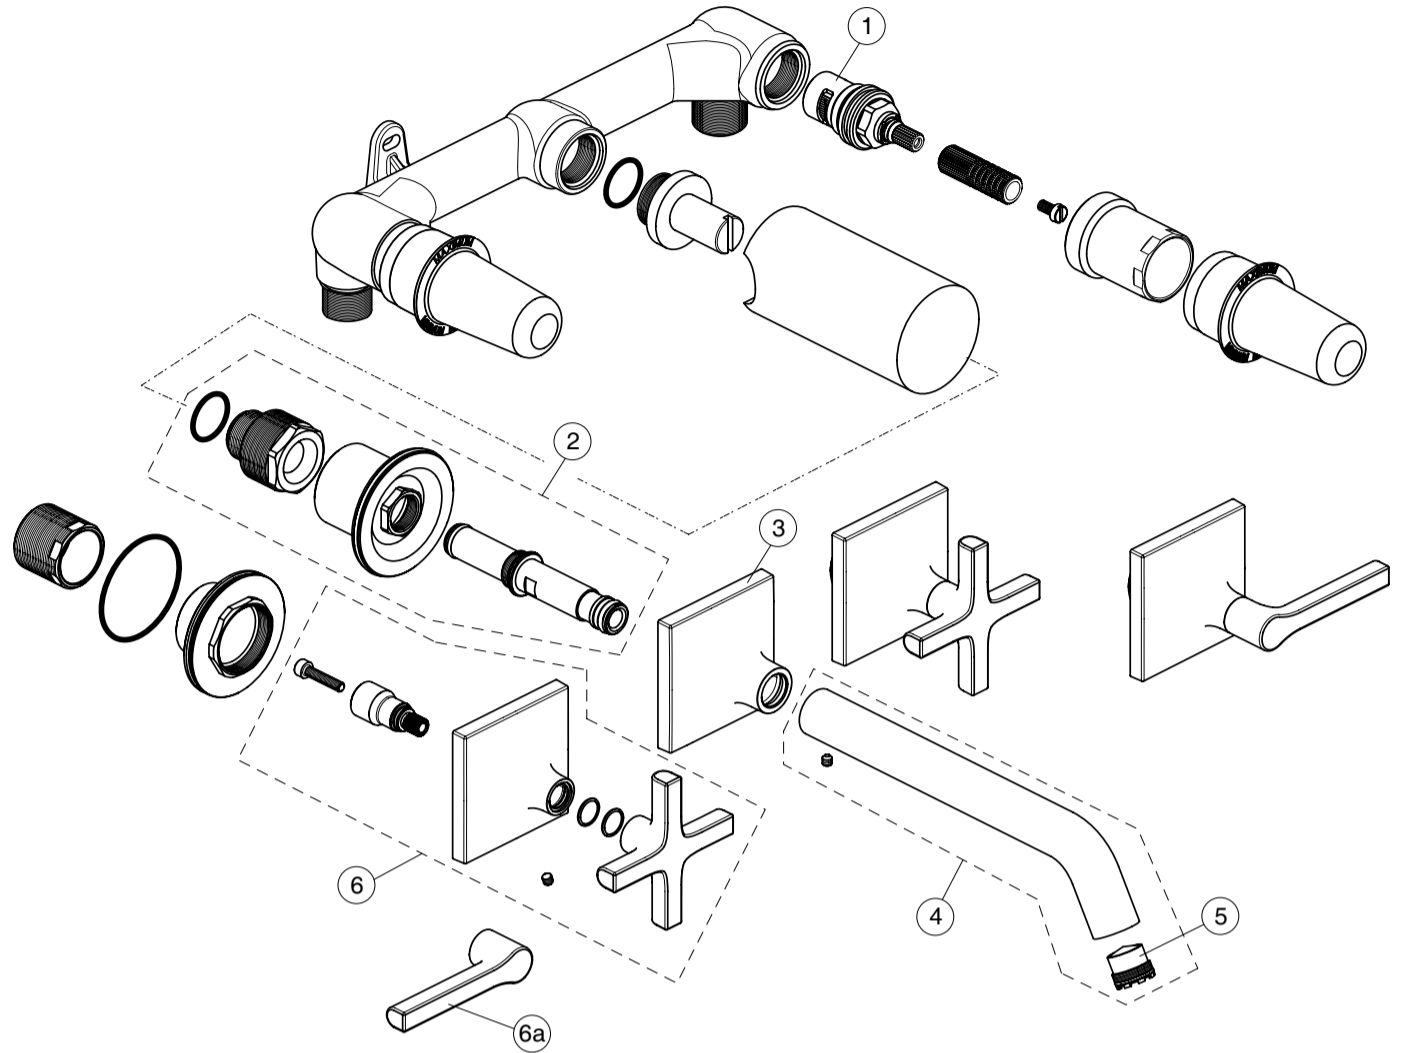


Ideal Standard






JOY NEO

12.2021 / B565160

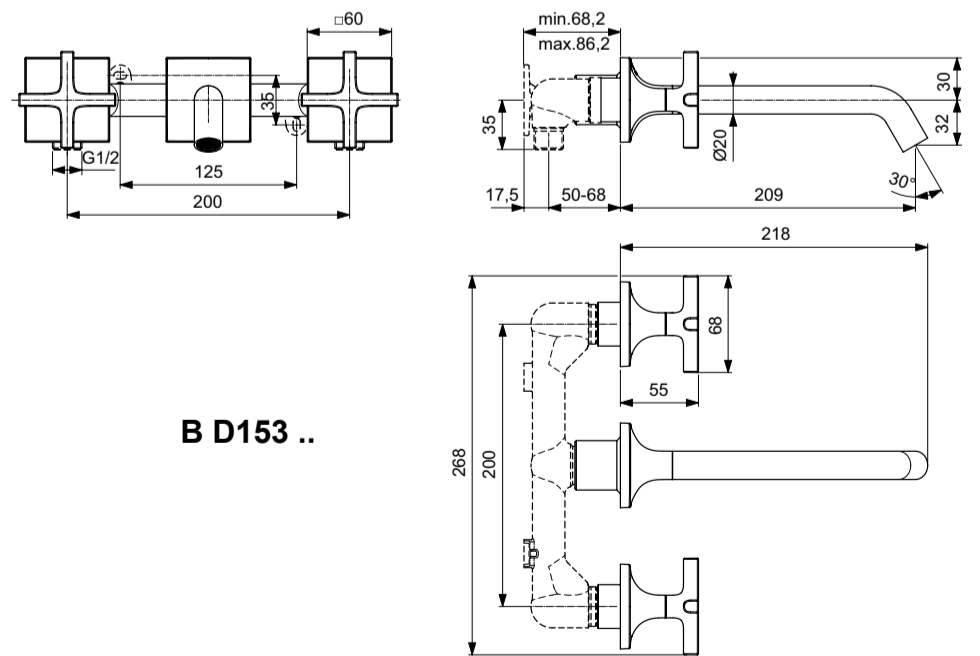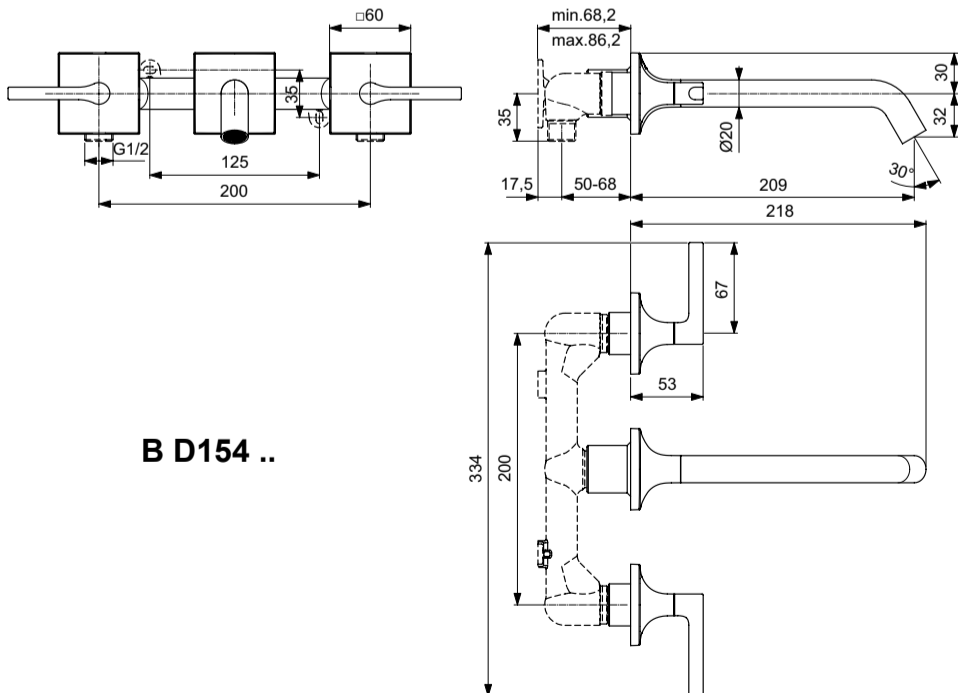

Ideal Standard International NV  
Corporate Village – Gent Building  
Da Vincilaan 2  
1935 Zaventem  
Belgium  
<http://www.idealstandardinternational.com>

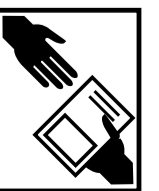

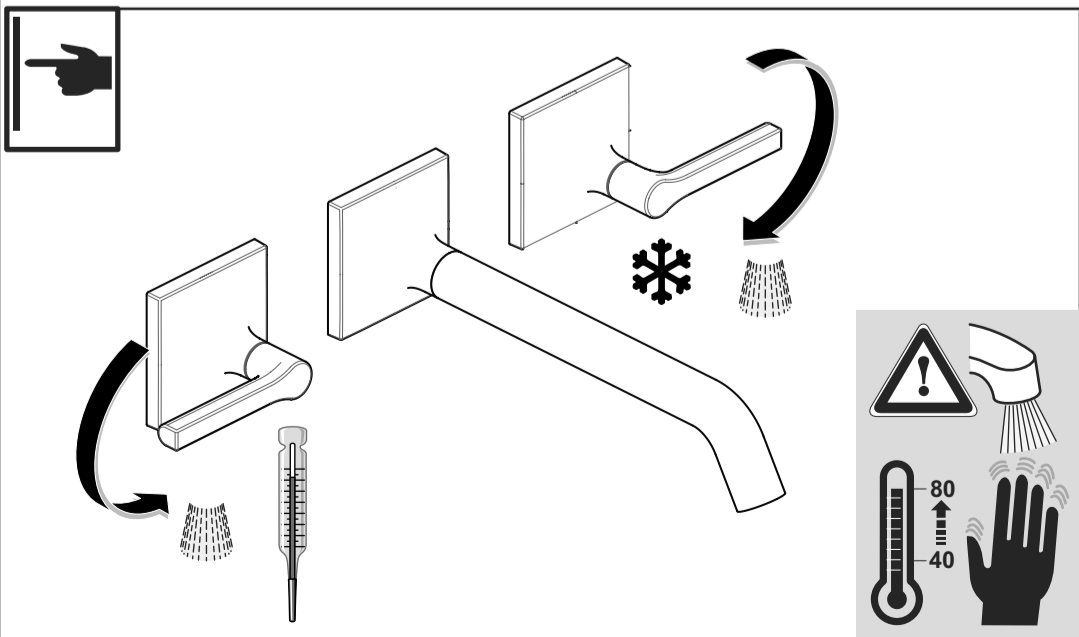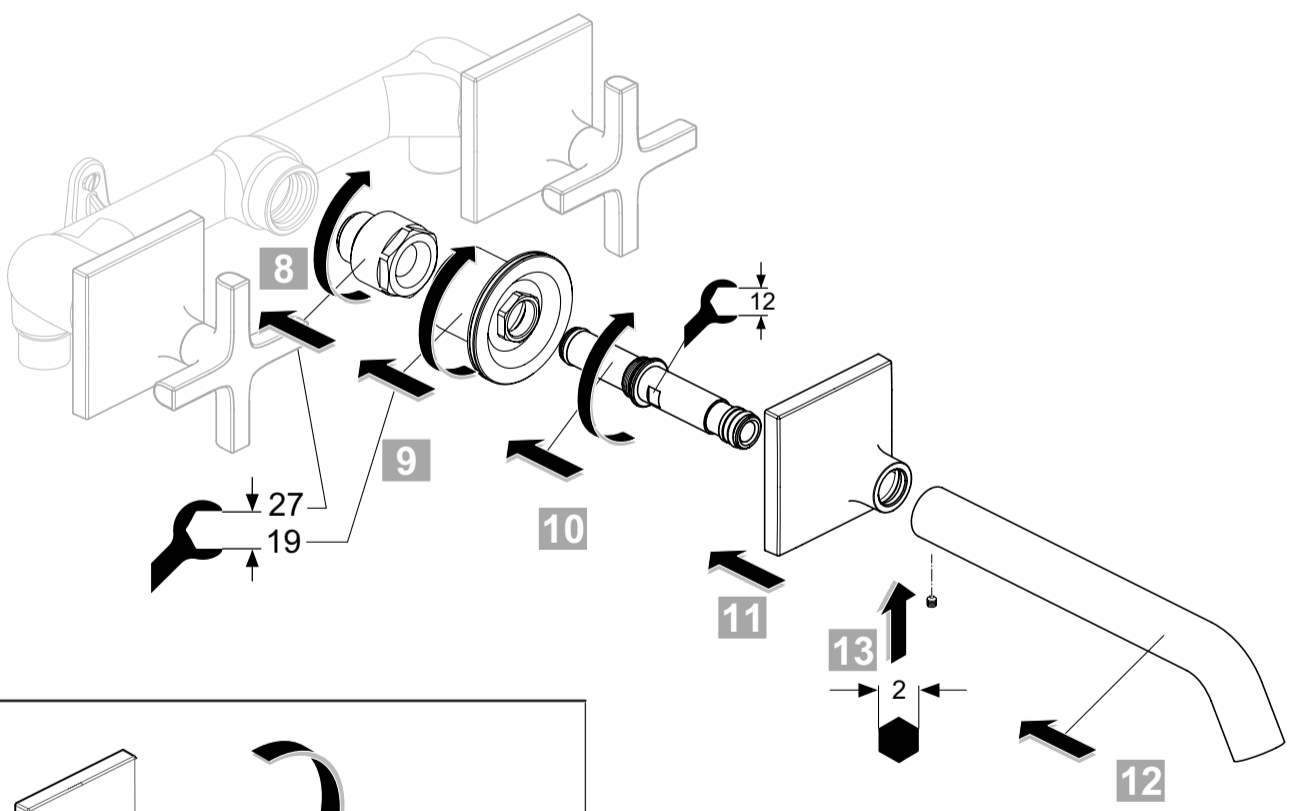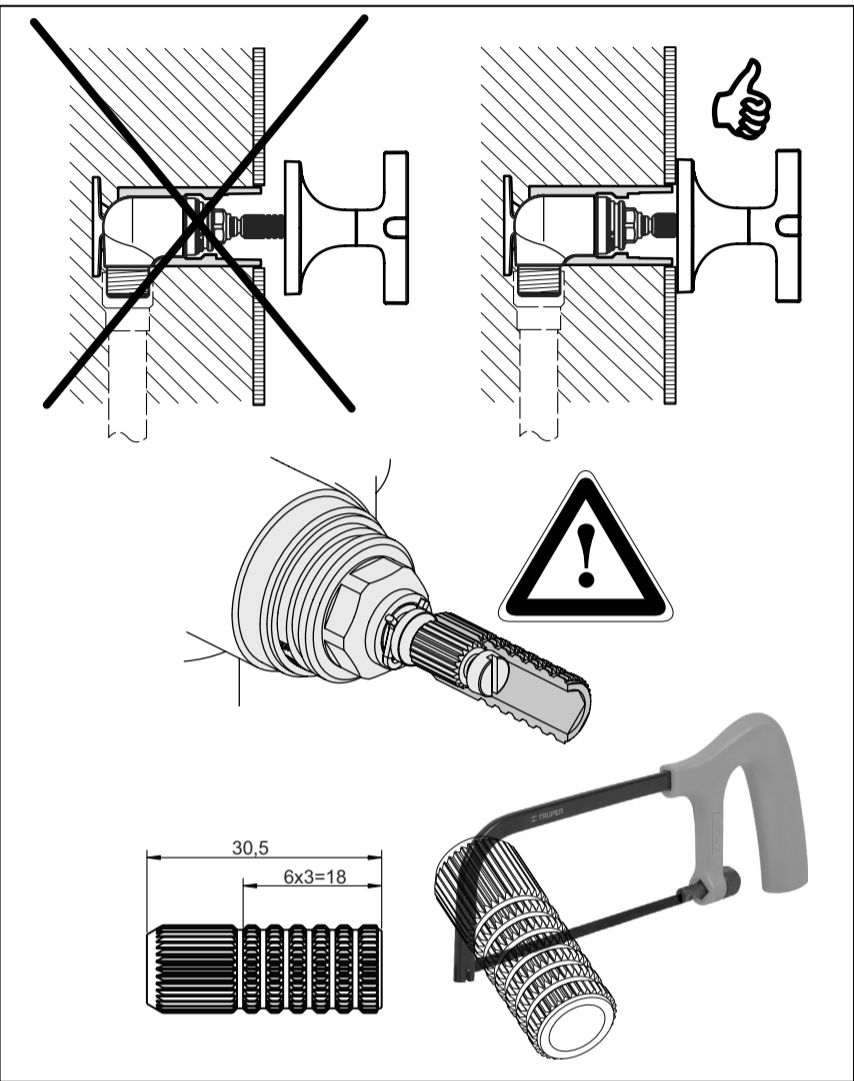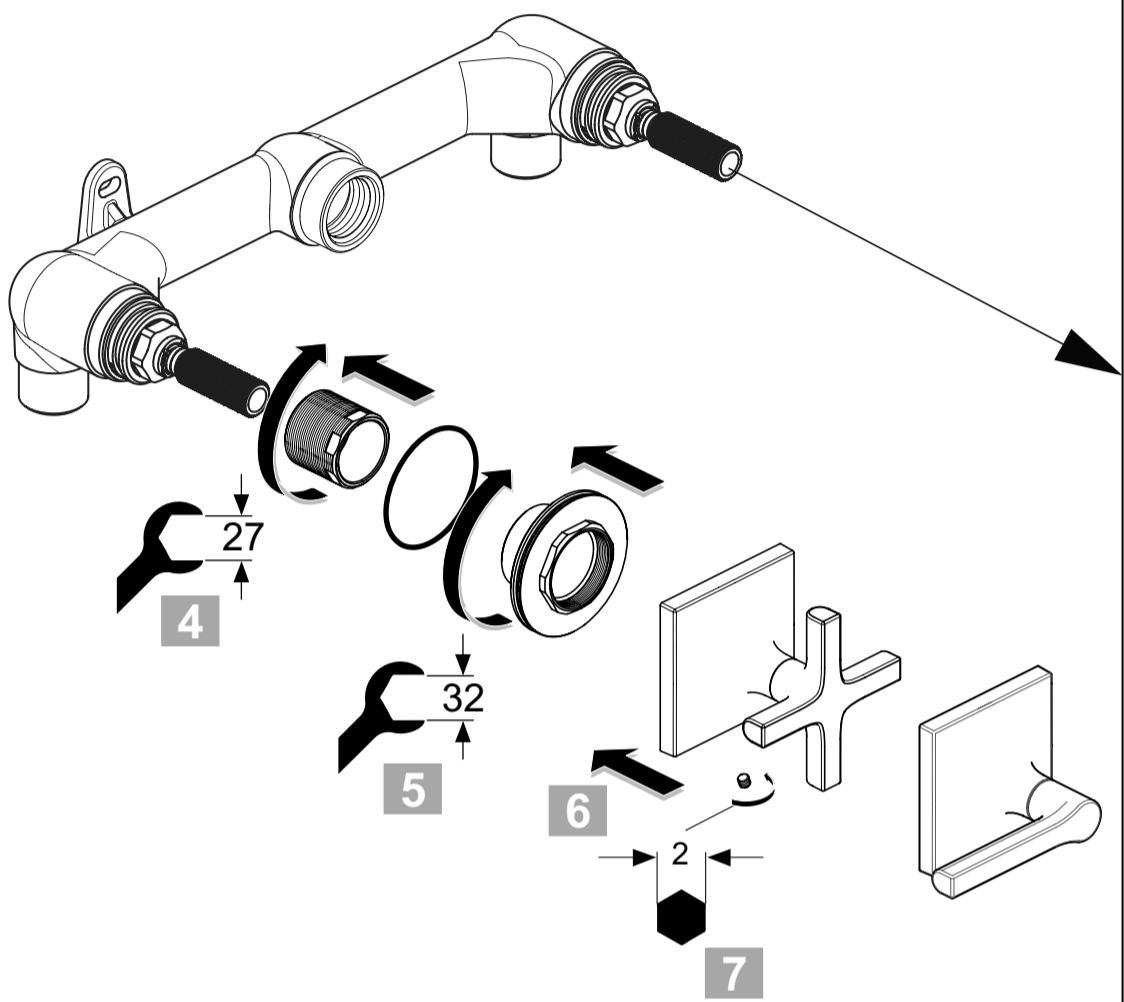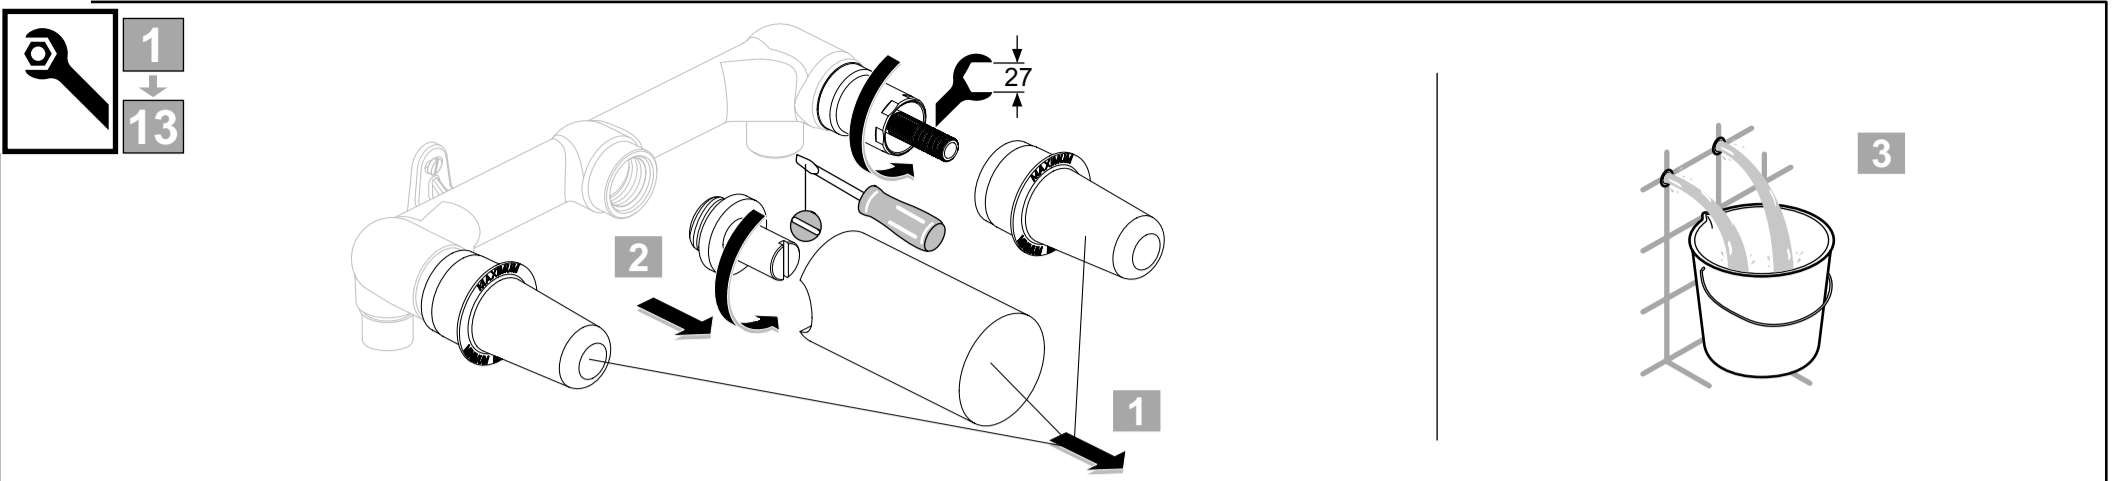

	<b>P</b>	bar	0,5		5		<b>Q</b> (3 bar)
	<b>T</b>	°C	MAX. 80		65		<b>l/min</b> 5