



Ordering spares / Ersatzteil - Regelung / Pièces de rechange /
Parti di ricambio / Lista de recambios / Onderdelen bestellen
(NL/B) / Κωδικό Ανταλλακτικών / Bestilling af reservedele
/ Beställning av reservdelar / Bestilling av reservedeler /
Резервни части / Запчасти / Części zapasowe / Piese de
schimb / Rendelhető alkatrészek / Запасні частини / Резервни
делови / Резервни делови / Atsarginių dalių / Tellitavad varu-
osad / Rezerves daļas / Náhradní díly / Náhradné diely / Yedek
parça siparişi / Nadomestni deli

XX = AA, AD,

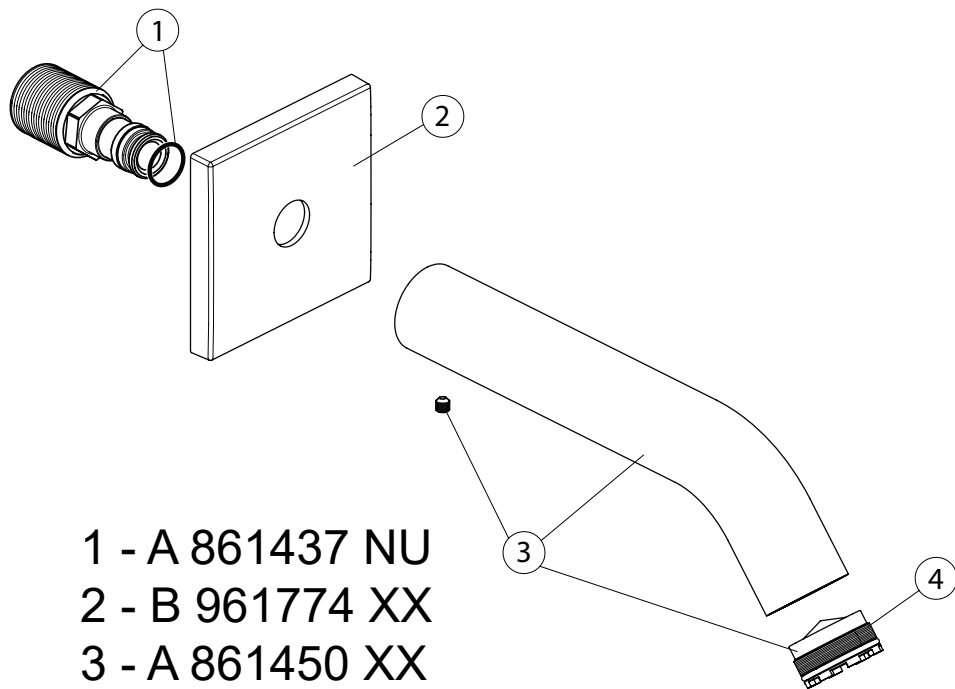

- 1 - A 861437 NU
- 2 - B 961774 XX
- 3 - A 861450 XX
- 4 - A 962002 NU

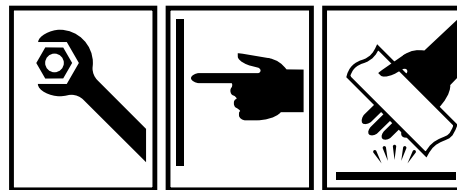


JOY NEO



Ideal Standard


12.2021 / B565170





B D170 ..

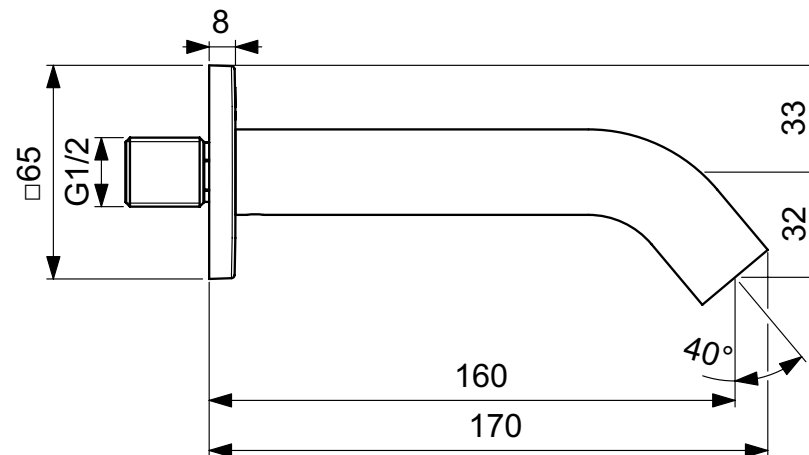

Ideal Standard International NV
Corporate Village – Gent Building
Da Vincilaan 2
1935 Zaventem
Belgium

<http://www.idealstandardinternational.com>

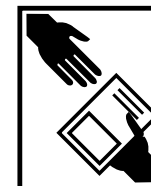

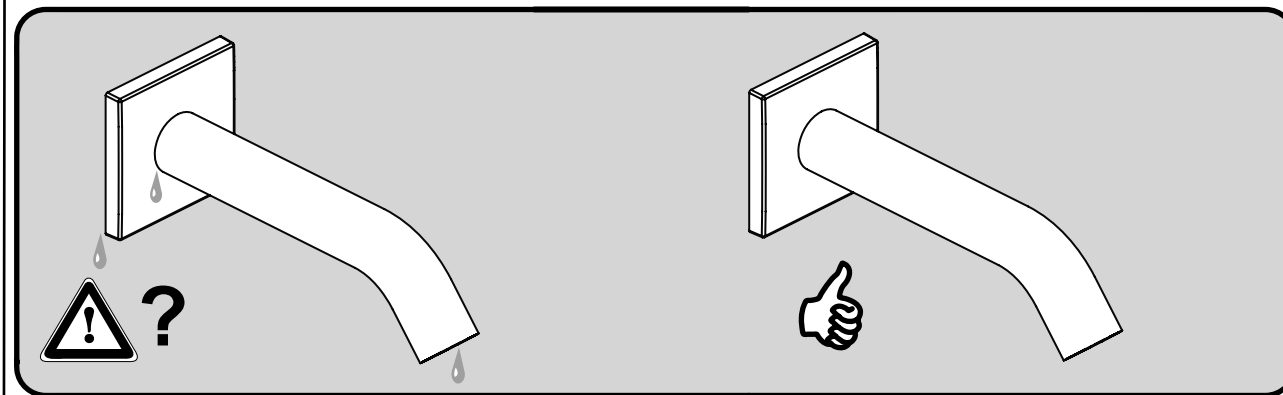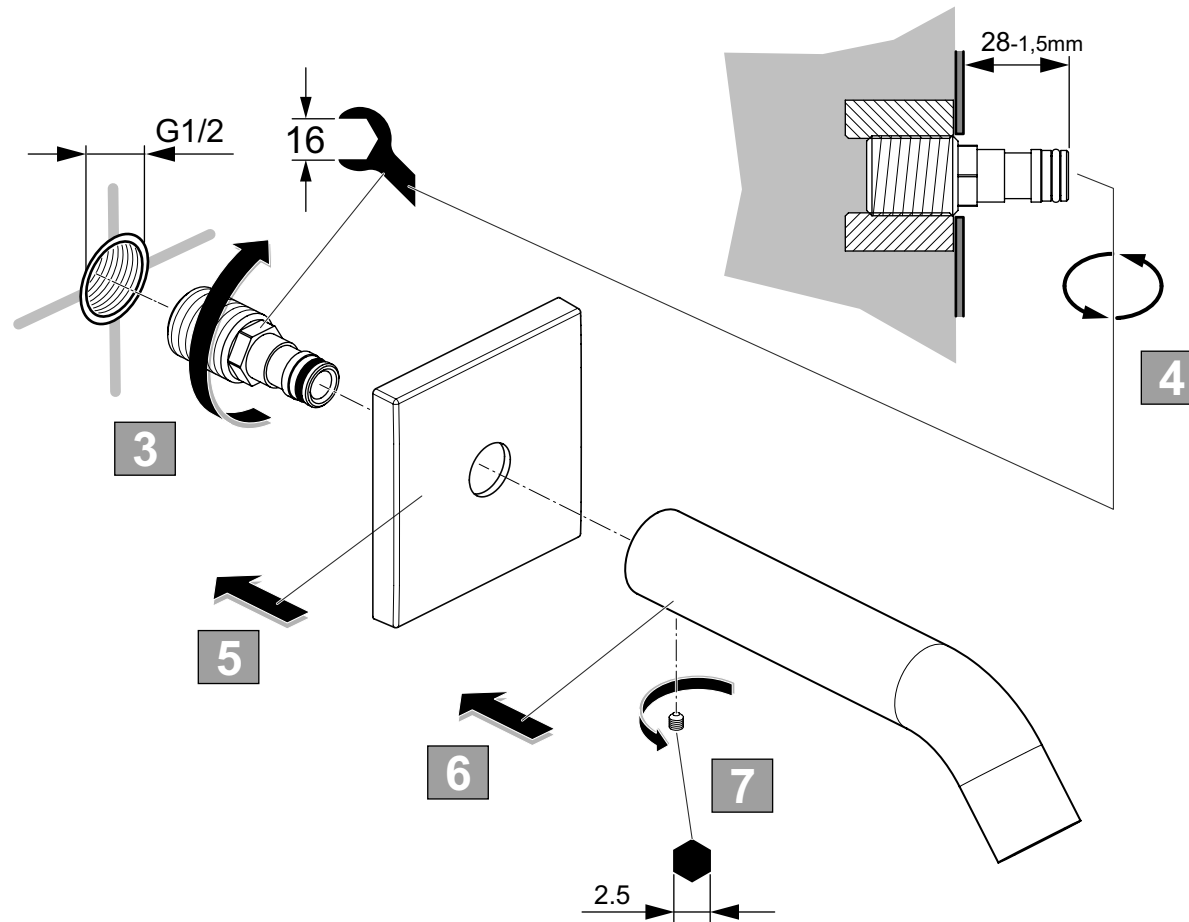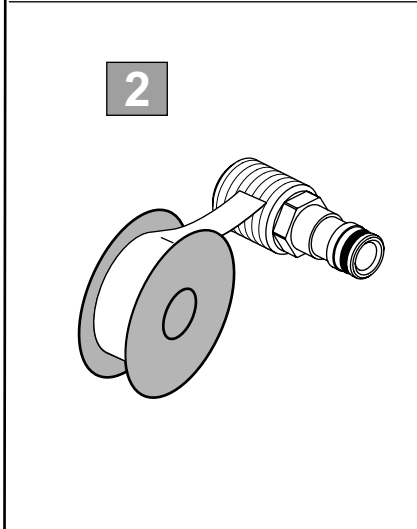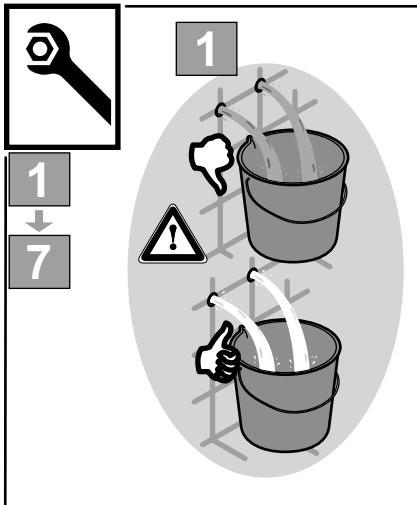

	P bar	MIN. 0,5		MAX. 5
	T °C	MIN. 10		MAX. 80